



DS-100

Signal bridge between RJ-45 and
RS-232

User's Manual

Version 2.0



www.airlive.com



Version 2.0

This guide is written for initial firmware version or later.

Copyright & Disclaimer

No part of this publication may be reproduced in any form or by any means, whether electronic, mechanical, photocopying, or recording without the written consent of OvisLink Corp.

OvisLink Corp. has made the best effort to ensure the accuracy of the information in this user's guide. However, we are not liable for the inaccuracies or errors in this guide. Please use with caution. All information is subject to change without notice

All Trademarks are properties of their respective holders.

Table of Contents

1. Introduction.....	2
1.1 Overview.....	2
1.2 How to Use This Guide	5
1.3 Firmware Upgrade and Tech Support	5
1.4 Features	6
2. Installing the DS-100.....	7
2.1 Before You Start.....	7
2.2 Package Content	7
2.3 Knowing your DS-100	8
2.4 Hardware Installation	10
2.4.1 LED Indicator.....	11
3. Configuring the DS-100	13
3.1 Important Information.....	13
3.2 Prepare your PC	13
3.3 Management Interface	14
3.4 Introduction to Web Management	14
3.4.1 Welcome Screen and Login.....	14
3.5 Introduction to Web Management	15
3.5.1 Getting into Web Management	15
4. Web Management in DS-100	16
4.1 About DS-100 Menu Structure	16
4.2 System Configuration	17
4.2.1 DS-100 Configuration	18
4.2.2 Gateway/Controller	20
4.2.3 Firmware Upgrade.....	26
4.2.4 Operation Instructions.....	28
5. Troubleshooting	29
5.1 Diagnosing LED Indicators	29
5.1.1 Cabling	29
6. Specifications	30
7. Network Glossary	31

1

Introduction



1.1 Overview

Whether you are “operating a wireless hotspot service for generating revenue” or “providing free but controlled wireless internet access to guests”, it would be handy to both the operators and the wireless users if the account information (such as username, password, SSID and etc.) can be readily output to POS printers and printed out as account tickets.

DS-100 is designed specifically to operate in conjunction with specific Controllers/Gateways. Typical serial POS printers on the market today may or may not be IP network ready, and it is not practical to integrate each brand one-by-one with Controllers/Gateways. Hence, it has specifically designed a smart device server – DS-100, for two purposes:

1. Attaching before a serial POS printer so that one or more POS printers can be connected to a Controller/Gateway via IP networks.
2. Pre-integrated with the Controller/Gateway so that account generation becomes quick and easy to the operator, simply by a push of buttons on the device.

It provides DS-100 and a POS printer as a combo set called Network Ticket Generator. The followings are typical application scenarios:


A small business who wishes to quickly set up a wireless service hotspot for charged internet service may purchase a Gateway, and a Network Ticket Generator set. The Gateway alone serves as an AP and a gateway, Network Ticket Generator enables the registration operator to generate and issue accounts via push buttons on the DS-100 and hand out the account ticket printed out by POS printer.

A corporate has several sites. Deployed at the reception area of each site are with a DS-100 and a POS printer. Guests who need wireless connection to the internet simply need to request the receptionist and obtain a slip with account information. The guest account will automatically expire after the pre-configured time.


A hotel has a Controller/Gateway and multiple APs within its hospitality areas. Multiple sets of Network Ticket Generator are distributed at the service desks and lounge counters. The service clerks are able to create accounts for their guests with charged or free internet service depending on the hotel's service model.

Below are two network diagrams examples using Network Ticket Generator combo set.

(1) One Gateway with one Network Ticket Generator set.

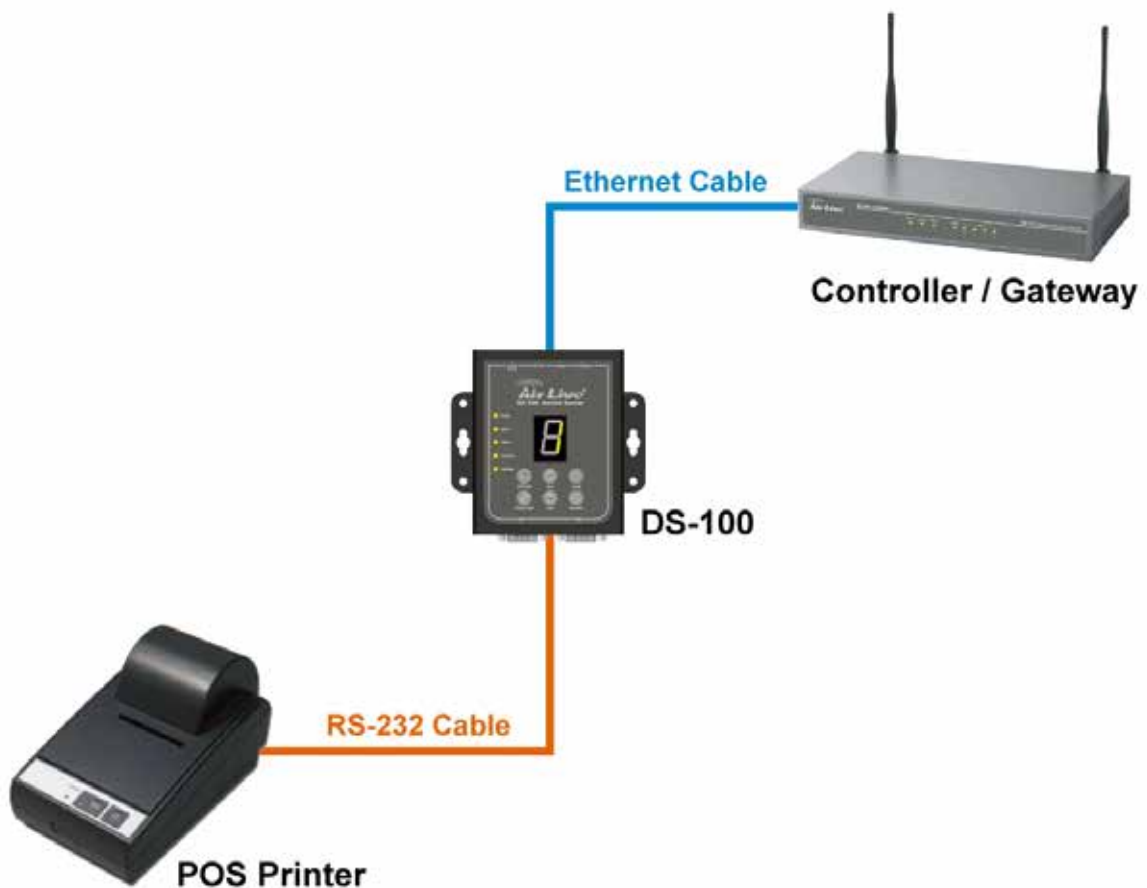

(2) One Gateway with multiple Network Ticket-Generator sets.

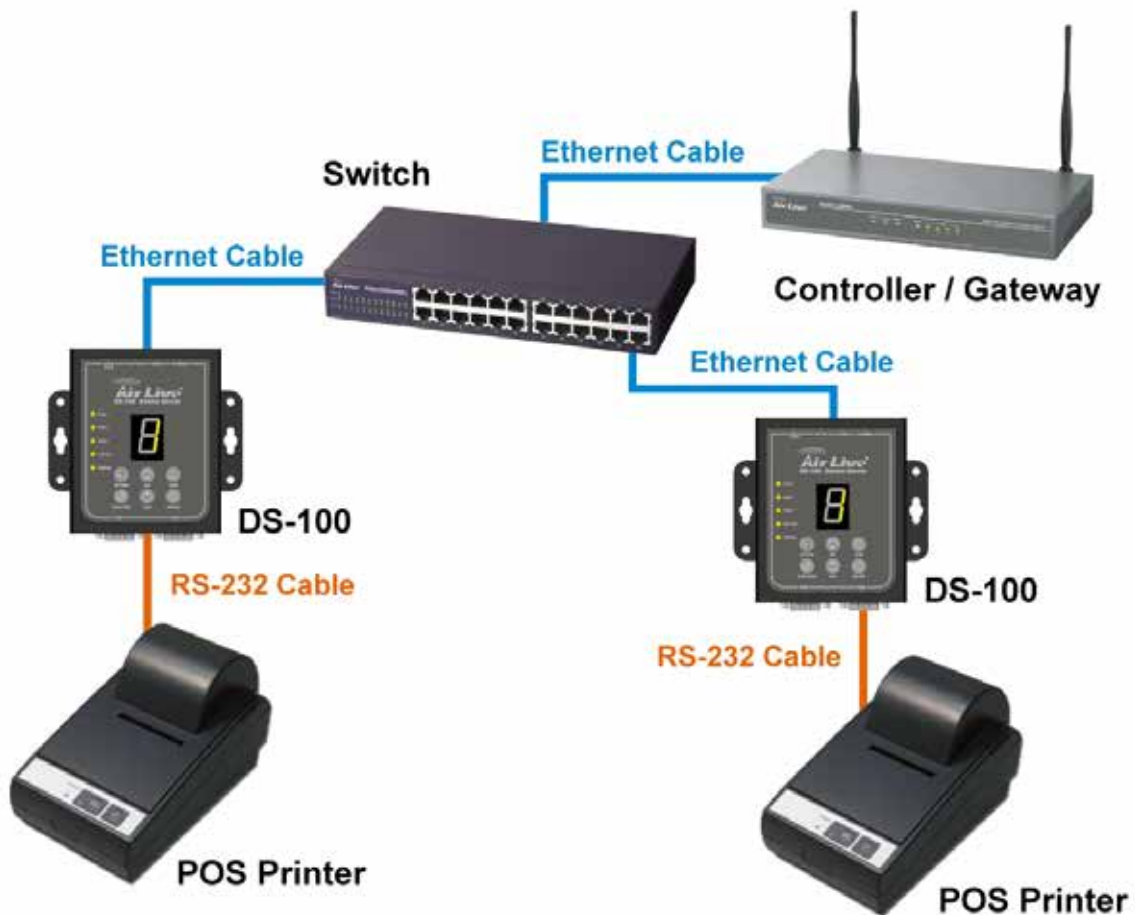

***Note:**

The POS printer has an individual manual, therefore, its configuration details is not covered in this guide.

Though DS-100 is specifically designed to for on-demand account generation and operate POS printers, it can also be deployed independently to connect other RS232 devices to an Ethernet network for remote operation. If you will be deploying DS-100 independently to manage other serial devices, please carefully set the Serial Settings in DS-100 to match the operating needs of your serial device.

***Note:**

If you connect other serial device to DS-100 and are unable to remotely operate your connected serial device, please check that:

The settings under Serial Settings of DS-100 are configured to match your serial device operating requirements.

If your serial device application operates on pure serial communication then you need to setup a COM port redirector.

1.2 How to Use This Guide

Recommended Reading

- q **Chapter 1:**
This chapter explains the basic information for DS-100. It is a must read.
- q **Chapter 2:**
This chapter is about hardware installation. You should read through the entire chapter.
- q **Chapter 3:**
 - n **3.1 Important Information:**
This section has information of default setting such as IP, Username, and Password.
 - n **3.2 Management Interface:**
This section introduces Web management.
 - n **3.3 Introduction to Web Management:**
 - n This section tells you how to get into the Web UI using HTTP.
- q **Chapter 4:**
This chapter explains all of the management functions via Web management.
- q **Chapter 5:**
- q This chapter shows technical specification of DS-100.
- q **Chapter 6:**
Explanation on network technical terms from A to Z. Highly recommended for reference when you encounter an unfamiliar term.

1.3 Firmware Upgrade and Tech Support

If you encounter a technical issue that cannot be resolved by information on this guide, we recommend that you visit our comprehensive website support at www.airlive.com. The tech support FAQ are frequently updated with latest information.

In addition, you might find new firmwares that either increase software functions or provide bug fixes for DS-100. You can reach our on-line support center at the following link:
http://www.airlive.com/support/support_2.jsp

Since 2009, AirLive has added the “Newsletter Instant Support System” on our website. AirLive Newsletter subscribers receives instant email notifications when there are new download or tech support FAQ updates for their subscribed airlive models. To become an AirLive newsletter member, please visit: http://www.airlive.com/member/member_3.jsp

Do you wish to subscriber to the automated monthly newsletter?

Monthly news : Subscribe Language :

Instant Support : Subscribe Language :

All Products

Product Main Category	Product Secondary Category	Model NO
Print Server	SOHO/Small business	WAS-1200G
Router	Multi-WAN Gateway	MW-2000S
Security Gateway	Server Appliance	IAS-2000
Skype	Office UTM Gateway	IAS-2000 v2
Switches	Office Security Gateway	WAS-1000G
VoIP	Hotspot System	DS-100
Wireless Indoor		
Wireless Accessory		
Wireless Outdoor		
WISP		

1.4 Features

- n 1 x 10/100Mbps RJ-45 port + 2 x RS-232 DB9 Serial port
- n Trigger the Built-in On-Demand Billing Plan inside the M-series Controller
- n Flow Control: RTS/CTS and DTR/DSR (RS-232 only), XON/XOFF
- n Supports Network Protocols: ICMP, IP, TCP, UDP, DHCP, BOOTP, Telnet, SNMP, HTTP
- n Web Management via web browser

2

Installing the DS-100

This chapter describes the hardware features and the hardware installation procedure for the DS-100. For software configuration, please go to chapter 3 for more details.

2.1 Before You Start

It is important to read through this section before you install the DS-100.

- n The maximum cabling distance is 100 meters.
- n Make sure that the connection between DS-100 and PC/NB is well established
- n Always check the LED lights for troubleshooting

2.2 Package Content


Unpack the contents of the DS-100 and verify them against the checklist below.

- n One unit of DS-100
- n Power Adapter
- n User Guide (CD-ROM)
- n Quick Installation Guide


Compare the contents of your DS-100 package with the standard checklist above. If any item is missing or damaged, please contact your local dealer for service.

2.3 Knowing your DS-100

Below are descriptions and diagrams of the product:

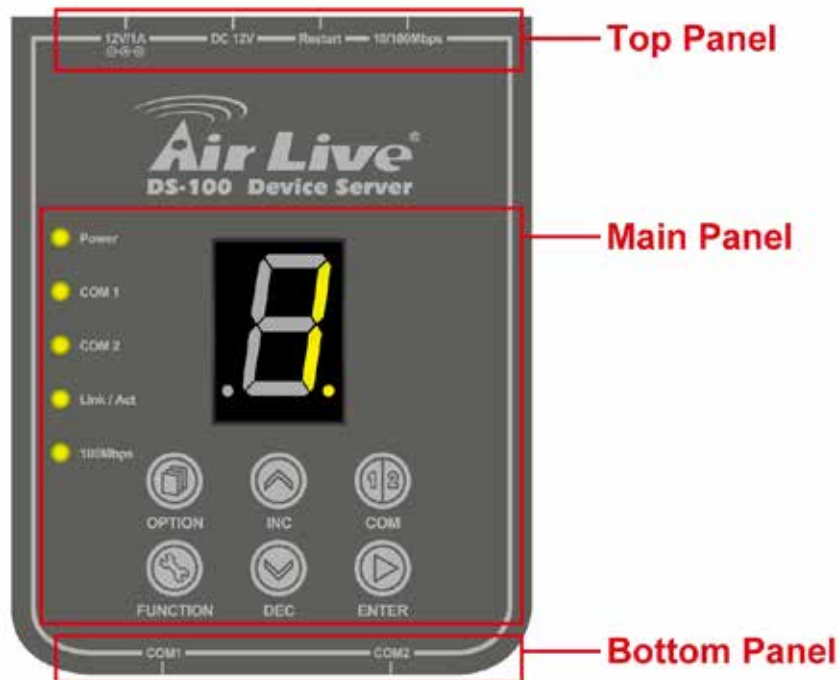


Top Panel

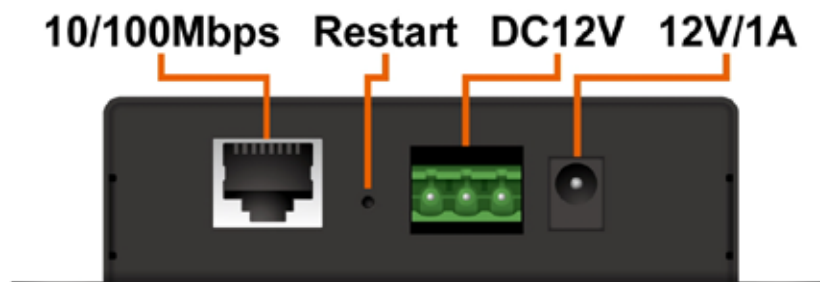

LED Behavior

Adapter Socket (12V/1A)	The power socket for connecting to an external power source through the power adapter provided in the package.
DC Socket (DC12V)	The power socket for connecting to an external power source through a DC power supply.
Restart Button	Press to restart DS-100.
Ethernet Port	Ethernet port for connecting to a Controller/Gateway.

Bottom Panel

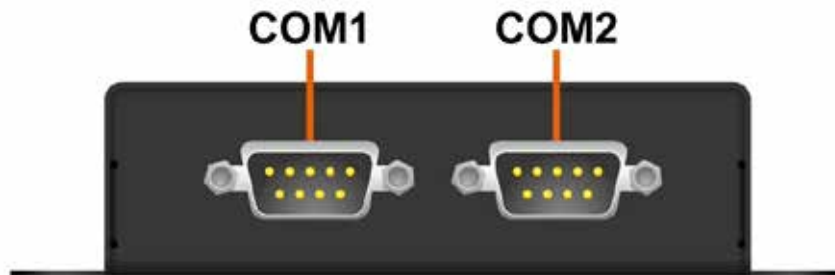

COM 1	Serial Port for connection with a POS printer.
COM2	Serial Port for connection with a POS printer. Used for back up when COM 1 malfunctions.

Main Panel




OPTION	For future use.
INC	Increase the numeric display for selecting a billing plan number.
COM	For switching the output to COM1 or COM2.

FUNCTION	<p>Press this button followed by selecting a number and press Enter will perform a specific action. The available combinations are as follows:</p> <ul style="list-style-type: none"> n FUNTION + 1 + ENTER: Print out the IP address of DS-100. n FUNTION + 8 + ENTER: Enter panel test mode. n FUNTION + 9 + ENTER: Reset DS-100 to factory default. n FUNTION + 0 + ENTER: Lock the panel of DS-100. To Unlock, select your lock number and press ENTER
DEC	Decrease the numeric display for selecting a billing plan number.
ENTER	Create and print out an account for the chosen billing plan.

2.4 Hardware Installation

The following diagram illustrates how to connect DS-100 to the POS printer and Gateways/Controllers. Please follow the steps described below to install hardware:

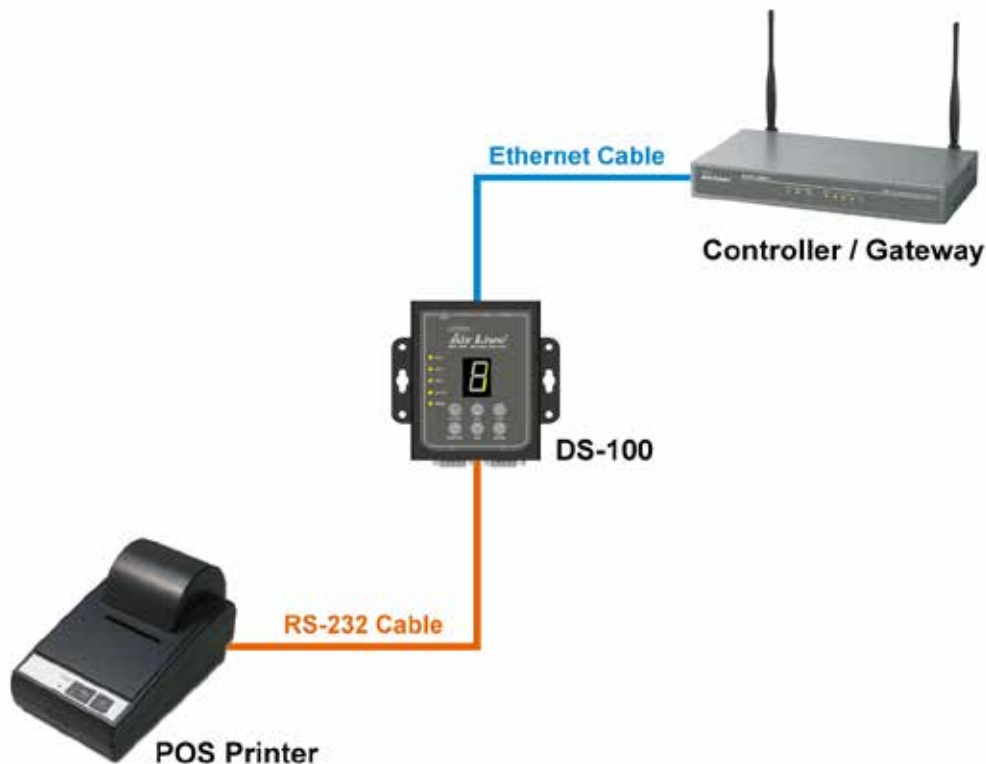

- (1) Attach DS-100 to a power source, either through adaptors provided in the package or through DC socket with a DC power supply.
- (2) Attach POS printer to a power source, through adaptors provided in the package and turn on the power switch situated on the left side of the device.
- (3) Connect POS printer to the COM1 port of DS-100 by a RS-232 cable provided within POS printer package.
- (4) Connect DS-100 to the LAN port of your Gateway/Controller by an Ethernet cable.

* **Note:** You need to connect to the correct LAN port if your Gateway/Controller is operating in Port-based mode.

- A. Make sure mounting surface on the bottom of the DS-100 is grease and dust free.
- B. Remove adhesive backing from your Rubber Feet.
- C. Apply the Rubber Feet to each corner on the bottom of the DS-100. These footpads can prevent the Switch from shock/vibration.

2.4.1 LED Indicator

The LED Indicators gives real-time information of systematic operation status. The following table provides descriptions of LED status and their meaning.



Power	Turned on when properly connect to power supply.
COM 1	<p>Turned on when output is switched to COM1.</p> <p>* Note: When COM 1 and COM 2 are blinking simultaneously, this means that Terminal Server configuration is not set correctly. Please check the settings in Terminal Server of your Gateway/Controller. When COM 1 and COM 2 are turned on simultaneously, this means that the system is in safe mode.</p>
COM 2	<p>Turned on when output is switched to COM2.</p> <p>* Note: When COM 1 and COM 2 are blinking simultaneously, this means that Terminal Server configuration is not set correctly. Please check the settings in Terminal Server of your Gateway/Controller. When COM 1 and COM 2 are turned on simultaneously, this means that the system is in safe mode.</p>
Link / Act	Turned on when LAN port is connected to an upstream networking device such as a switch or Gateway/Controller.
100Mbps	Turned on when LAN port is connected.
7 Segments	Displays an integer between 0 ~ 9 which indicates the billing plan number selected.

3

Configuring the DS-100

DS-100 is designed specifically to operate in conjunction with all Gateways/Controllers. If you are not using default settings, before connecting DS-100 to your Gateway/Controller, some configurations steps are required. The configuration instructions for Gateways/Controllers and DS-100 are covered in the following sections.

3.1 Important Information

The following information will help you to get start quickly. However, we recommend you to read through the entire manual before you start. Please note the username and password are case sensitive.


- q **The default IP address is:** 192.168.1.10
- q **Subnet Mask:** 255.255.255.0
- q **The default Gateway is:** 192.168.1.254

3.2 Prepare your PC

The DS-100 can be managed remotely by a PC through RJ-45 cable. The default IP address of the DS-100 is **192.168.1.10** with a subnet mask of 255.255.255.0. This means the IP address of the PC should be in the range of 192.168.1.2 to 192.168.1.253 (do not include 192.168.1.10).

To prepare your PC for management with the DS-100, please do the following:

1. Connect your PC directly to the copper port of DS-100
2. Set your PC's IP address manually to 192.168.1.100 (or other address in the same subnet)

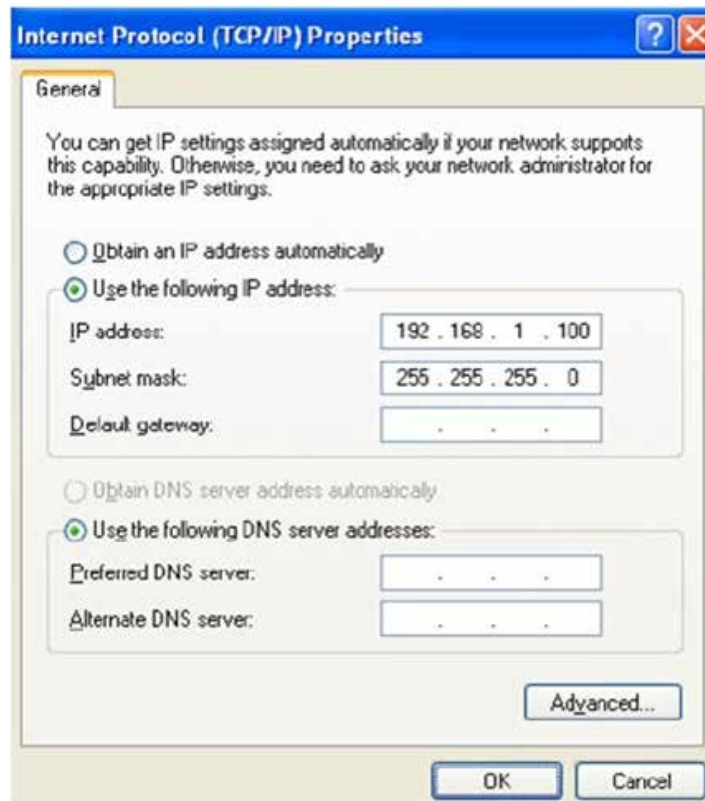

You are ready now to configure the DS-100 by using your PC.

3.3 Management Interface

The DS-100 can be configured using on the Web management interfaces.

- n **Web Management (HTTP):** You can manage your DS-100 by simply typing its IP address in the web browser. Most functions of DS-100 can be accessed by web management interface. We recommend using this interface for initial configurations. To begin, simply enter DS-100's IP address (default is 192.168.1.10) on the web browser.

3.4 Introduction to Web Management

3.4.1 Welcome Screen and Login

The DS-100 offers Web Management interfaces for users. Users can easily access and control DS-100 via web browsers. The Web-Based Management supports Internet Explorer 5.0. It is based on Java Applets with an aim to reduce network bandwidth consumption, enhance access speed and present an easy viewing screen.

3.5 Introduction to Web Management

We recommend users to browse through DS-100's web management interface to get an overall picture of the functions and interface. Below are the recommended initial configurations for first time login:

*** Note:** By default, IE5.0 or later version does not allow Java Applets to open sockets. The user has to explicitly modify the browser setting to enable Java Applets to use network ports.

3.5.1 Getting into Web Management

Web Management (HTTP)

1. Launch the Internet Explorer.
2. Type <http://192.168.1.10> . Press "Enter".



3. The home screen of the Web-based management appears.

Serial Settings	
Data Baud Rate	9600
Data Bits	8
Data Parity	None
Stop Bits	1
Flow Control	None
Network Settings	
Static IP Address	192.168.1.10
Static Subnet Mask	255.255.255.0
Static Default Gateway	192.168.1.254
Static DNS Server	168.95.1.1
Transmit Timer	10
Server Listening Port	5000
Lock Password	0
<input type="checkbox"/> Safe Mode	
<input type="button" value="Apply"/> <input type="button" value="Clear"/>	
Utilities	
Firmware Upgrade	<input type="button" value="Apply"/>
Restart	<input type="button" value="Apply"/>
Reset to Factory Default	<input type="button" value="Apply"/>
Status	
Software Version	1.00.00_00500

4

Web Management in DS-100

In this chapter, we will explain all settings in web management interface. Please be sure to read through Chapter 3's "Introduction to Web Management" first.

4.1 About DS-100 Menu Structure

The web management menu of DS-100 is divided into 4 parts: Serial Settings, Network Settings, Utilities and Status.

Serial Settings	
Data Baud Rate	9600 <input type="button" value="v"/>
Data Bits	8 <input type="button" value="v"/>
Data Parity	None <input type="button" value="v"/>
Stop Bits	1 <input type="button" value="v"/>
Flow Control	None <input type="button" value="v"/>
Network Settings	
Static IP Address	<input type="text" value="192.168.1.10"/>
Static Subnet Mask	<input type="text" value="255.255.255.0"/>
Static Default Gateway	<input type="text" value="192.168.1.254"/>
Static DNS Server	<input type="text" value="168.95.1.1"/>
Transmit Timer	<input type="text" value="10"/>
Server Listening Port	<input type="text" value="5000"/>
Lock Password	<input type="text" value="0"/>
<input type="checkbox"/> Safe Mode	
<input type="button" value="Apply"/> <input type="button" value="Clear"/>	
Utilities	
Firmware Upgrade	<input type="button" value="Apply"/>
Restart	<input type="button" value="Apply"/>
Reset to Factory Default	<input type="button" value="Apply"/>
Status	
Software Version	<input type="text" value="1.00.00_00500"/>

Serial Settings (corresponding to POS printer)	
Data Baud Rate	Select the desired baud rate. (The number of characters per second transferred)
Data Bits	Select the number of bits in each character.
Data Parity	Choose between Even or Odd for error detection, or select None for no error detection.
Stop Bits	Choose the number of stop bits to be sent at the end of every character. Electronic devices usually use 1 bit, slower electromechanical devices use 1.5 bit.
Flow Control	Choose the method of flow control to pause and resume the transmission of data to coordinate with printer speed. Select None if flow control is not required.
Network Settings	
Static IP Address	The static IP address assigned to DS-100.
Static Subnet Mask	The subnet mask of DS-100.
Static Default Gateway	The default gateway of DS-100.
Static DNS Server	Set the DNS server used by DS-100.
Transmit Timer	TCP transmit timer, set the desired value or use default value. When the timer expires for a sent packet, sender will retransmit the packet.
Server Listening Port	Set the port number for communication with the Gateway/Controller.
Lock Password	This attribute is the integer between 0 ~ 9 that will be set as the password for unlocking the main panel.
Utilities	
Firmware Upgrade	Firmware of DS-100 can be upgraded by clicking the Apply button. Note: Upgrade preparations are required before upgrade, please refer to Appendix B. Firmware Upgrade
Restart	Click Apply to restart DS-100 device.
Reset to Factory Default	Click Apply to reset DS-100 to factory default settings.
Status	Software Version

4.2 System Configuration

DS-100 is designed specifically to operate in conjunction with all Gateways/Controllers. If you are not using default settings, before connecting DS-100 to your Gateway/Controller, some configurations steps are required. The configuration instructions for Gateways /Controllers and DS-100 are covered in the following sections.

4.2.1 DS-100 Configuration


DS-100 supports web based configuration. By factory default, DS-100 web interface can be accessed with

IP address: 192.168.1.10

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.1.254

Step1: Configure administrator PC's TCP/IP settings with a static IP address that is under the same subnet mask as DS-100. For example: 192.168.1.100

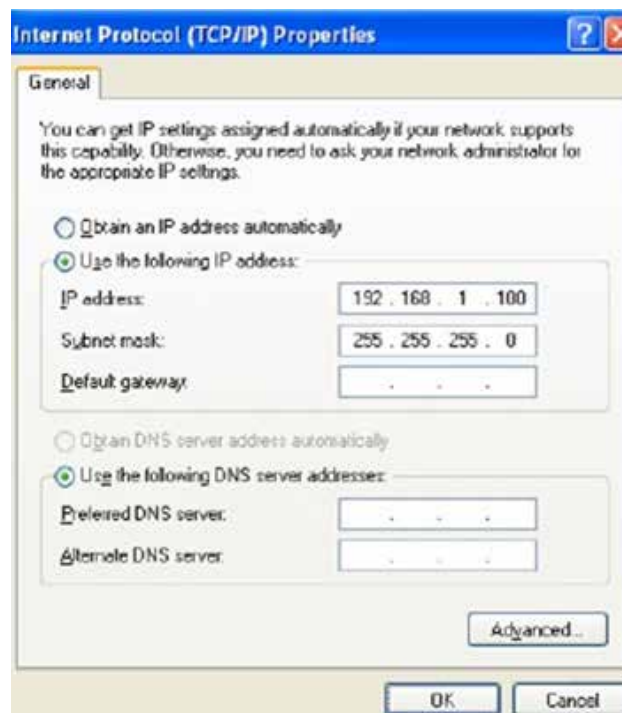

Step2: Attach DS-100 to a power supply using the adapter provided in the package. Connect the administrator PC to the Ethernet Port of DS-100 via an Ethernet cable. Launch a web browser and type in the default IP address of DS-100 in the address field (<http://192.168.1.10>), the web interface of DS-100 should appear.

Serial Settings	
Data Baud Rate	9600
Data Bits	8
Data Parity	None
Stop Bits	1
Flow Control	None
Network Settings	
Static IP Address	192.168.1.10
Static Subnet Mask	255.255.255.0
Static Default Gateway	192.168.1.254
Static DNS Server	168.95.1.1
Transmit Timer	10
Server Listening Port	5000
Lock Password	0
<input type="checkbox"/> Safe Mode	
<input type="button" value="Apply"/> <input type="button" value="Clear"/>	
Utilities	
Firmware Upgrade	<input type="button" value="Apply"/>
Restart	<input type="button" value="Apply"/>
Reset to Factory Default	<input type="button" value="Apply"/>
Status	
Software Version	1.00.00_00500


Step3: Change DS-100 Network Settings if necessary so that the IP address of DS-100 is under the same subnet as the Gateway/Controller's interface, which DS-100 will be connected to. Click Apply to save the settings.

Serial Settings	
Data Baud Rate	9600
Data Bits	8
Data Parity	None
Stop Bits	1
Flow Control	None
Network Settings	
Static IP Address	192.168.1.10
Static Subnet Mask	255.255.255.0
Static Default Gateway	192.168.1.254
Static DNS Server	168.95.1.1
Transmit Timer	10
Server Listening Port	5000
Lock Password	0
<input type="checkbox"/> Safe Mode	
<input type="button" value="Apply"/> <input type="button" value="Clear"/>	
Utilities	
Firmware Upgrade	<input type="button" value="Apply"/>
Restart	<input type="button" value="Apply"/>
Reset to Factory Default	<input type="button" value="Apply"/>
Status	
Software Version	1.00.00_00500

4.2.2 Gateway/Controller

Configuration procedures are similar on all Gateway/Controller models, the following instruction steps uses WIAS-3200N as example.

Step1: Connect administrator PC to your WIAS-3200N and access the Web management interface.

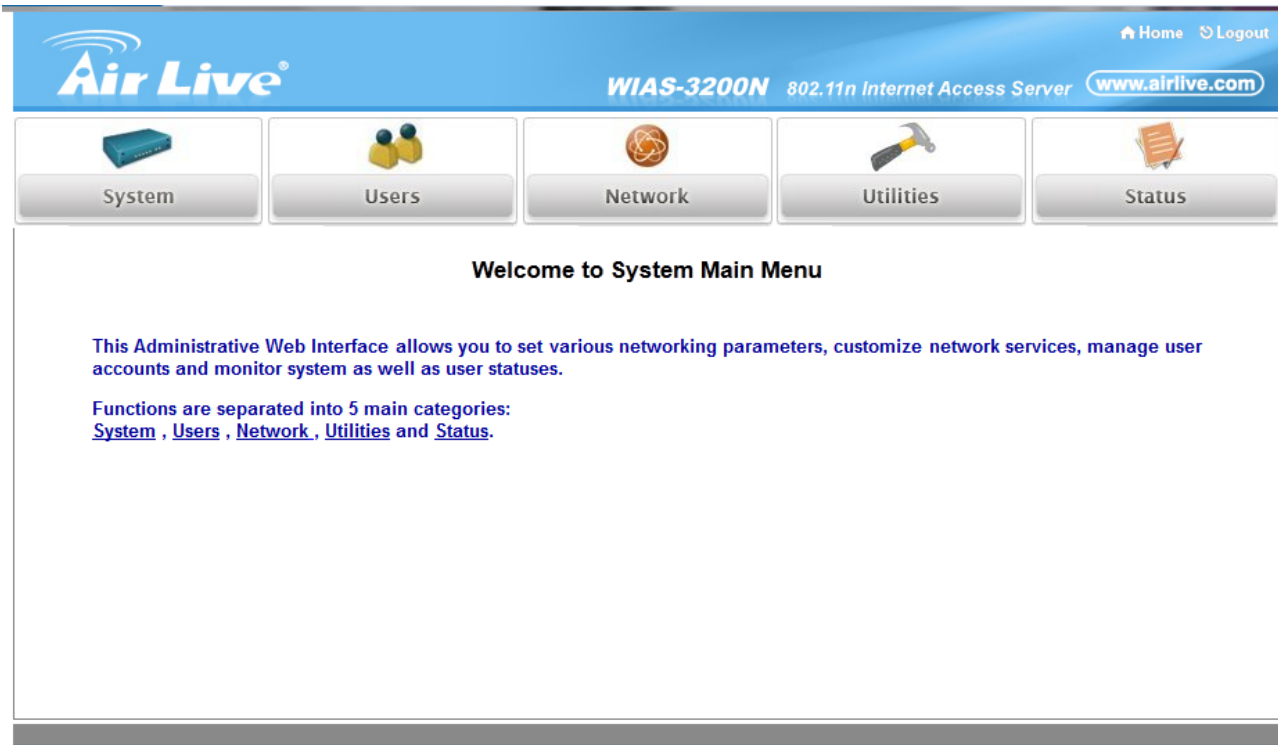

Step2: Enter the configuration page of the Service Zone which DS-100 will be connected to. Check to make sure that the network settings of DS-100 are under the same subnet as this service zone.

Home Logout
Air Live®
WIAS-3200N 802.11n Internet Access Server www.airlive.com


System


Users


Network


Utilities



Status

General | WAN Configuration | WAN Traffic | Zone Configuration

Zone Settings				
Name	ESSID	Wireless Security	Default Authen Option	Details
Private	air@live	None	N/A	Configure
Public	airlive-2	None	On-demand User	Configure

Wireless General Settings	
Band	802.11g+802.11n <input type="checkbox"/> Pure 11n
Short Preamble	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Short Guard Interval	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Channel Width	20 MHz
Channel	1
Max Transmit Rate	Auto
Transmit Power	Highest
DTIM Period	1 (1-255ms)
ACK Timeout	100 (0-255ms)


Apply
Cancel

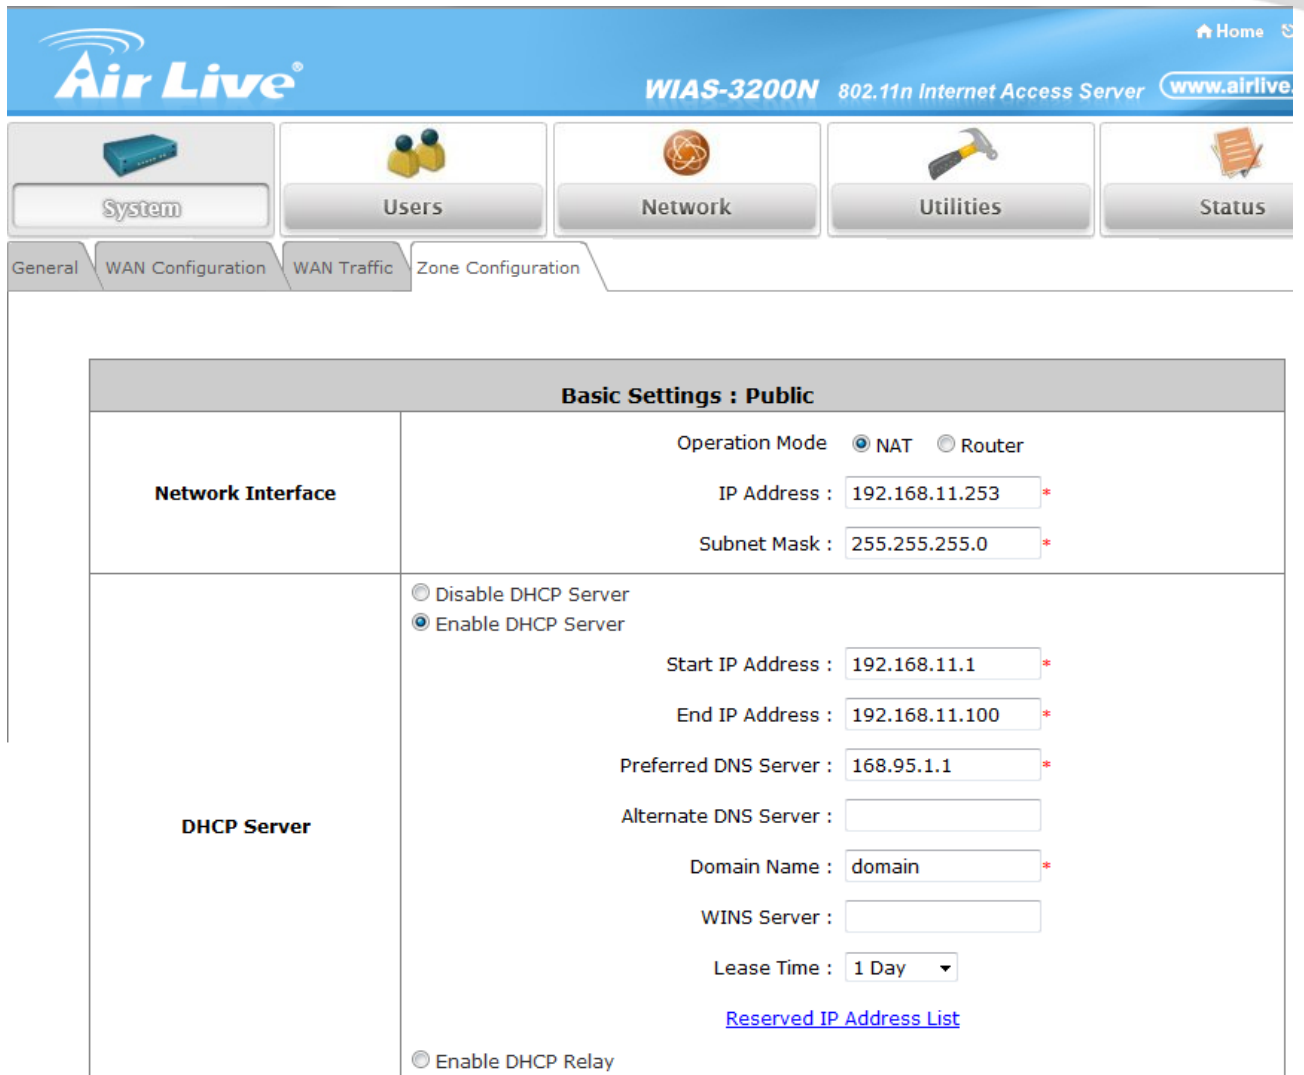

The screenshot shows the Air Live web management interface for a WIAS-3200N 802.11n Internet Access Server. The navigation menu includes System, Users, Network, Utilities, and Status. The current page is 'Zone Configuration' with sub-tabs for General, WAN Configuration, WAN Traffic, and Zone Configuration. The 'Basic Settings : Public' section is active, showing configuration for a Network Interface and a DHCP Server.

Basic Settings : Public	
Network Interface	Operation Mode <input checked="" type="radio"/> NAT <input type="radio"/> Router
	IP Address : <input type="text" value="192.168.11.253"/> *
	Subnet Mask : <input type="text" value="255.255.255.0"/> *
DHCP Server	<input type="radio"/> Disable DHCP Server <input checked="" type="radio"/> Enable DHCP Server
	Start IP Address : <input type="text" value="192.168.11.1"/> *
	End IP Address : <input type="text" value="192.168.11.100"/> *
	Preferred DNS Server : <input type="text" value="168.95.1.1"/> *
	Alternate DNS Server : <input type="text"/>
	Domain Name : <input type="text" value="domain"/> *
	WINS Server : <input type="text"/>
	Lease Time : <input type="text" value="1 Day"/> ▼
Reserved IP Address List	
<input type="radio"/> Enable DHCP Relay	

Step3: Enter Authentication Configuration page, and clicks on "Configure" Button of ONDEMAND.

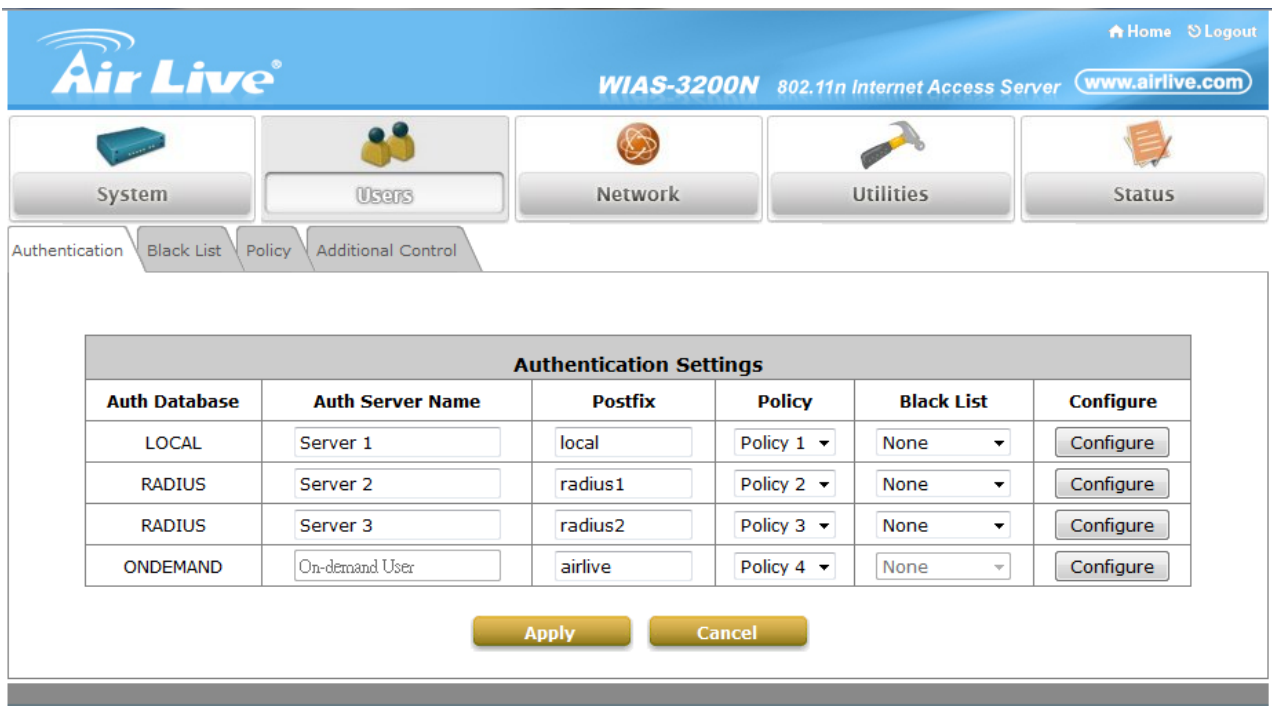


The screenshot shows the Air Live web management interface. At the top, there is a blue header with the Air Live logo, the model name "WIAS-3200N", the description "802.11n Internet Access Server", and the website "www.airlive.com". Below the header is a navigation menu with buttons for System, Users, Network, Utilities, and Status. Under the Users button, there are sub-menus for Authentication, Black List, Policy, and Additional Control. The Authentication sub-menu is selected, displaying the "Authentication Settings" table.

Authentication Settings					
Auth Database	Auth Server Name	Postfix	Policy	Black List	Configure
LOCAL	Server 1	local	Policy 1	None	Configure
RADIUS	Server 2	radius1	Policy 2	None	Configure
RADIUS	Server 3	radius2	Policy 3	None	Configure
ONDEMAND	On-demand User	airlive	Policy 4	None	Configure

At the bottom of the table, there are two buttons: "Apply" and "Cancel".


Step4: Define Terminal Server setting in WIAS-3200N, clicks on "**Configure**" of Terminal Server setting and configure further information

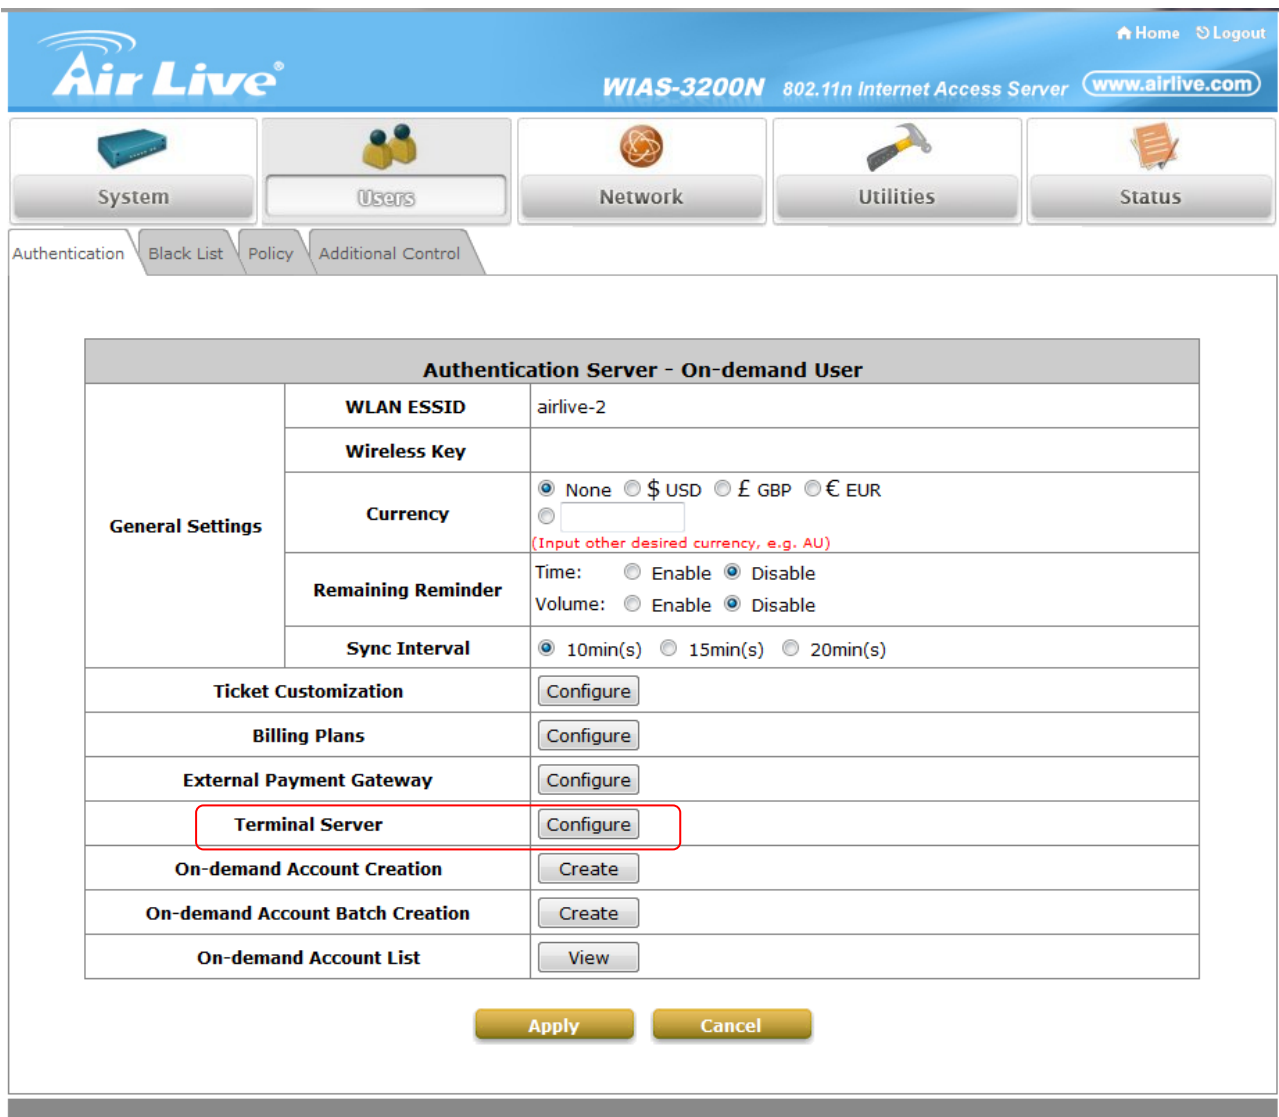



The screenshot shows the 'Authentication Server - On-demand User' configuration page. The page has a blue header with the 'Air Live' logo and navigation links for 'Home' and 'Logout'. Below the header is a navigation bar with icons for 'System', 'Users', 'Network', 'Utilities', and 'Status'. The main content area is titled 'Authentication Server - On-demand User' and contains a table of settings. The 'Terminal Server' setting is highlighted with a red box. At the bottom of the page are 'Apply' and 'Cancel' buttons.


Authentication Server - On-demand User		
General Settings	WLAN ESSID	airlive-2
	Wireless Key	
	Currency	<input checked="" type="radio"/> None <input type="radio"/> \$ USD <input type="radio"/> £ GBP <input type="radio"/> € EUR <input type="text"/> <small>(Input other desired currency, e.g. AU)</small>
	Remaining Reminder	Time: <input type="radio"/> Enable <input checked="" type="radio"/> Disable Volume: <input type="radio"/> Enable <input checked="" type="radio"/> Disable
	Sync Interval	<input checked="" type="radio"/> 10min(s) <input type="radio"/> 15min(s) <input type="radio"/> 20min(s)
Ticket Customization	Configure	
Billing Plans	Configure	
External Payment Gateway	Configure	
Terminal Server	Configure	
On-demand Account Creation	Create	
On-demand Account Batch Creation	Create	
On-demand Account List	View	


Step5: Input DS-100's IP address/Port number into WIAS-3200N's Terminal Server setting. Click **Apply** to save the setting.


System


Users


Network


Utilities


Status

Authentication

Black List


Policy


Additional Control


Terminal Server Configuration


Item	Server IP	Port	Location	Remark
1	<input type="text" value="192.168.1.10"/>	<input type="text" value="5000"/>	<input type="text"/>	<input type="text"/>
2	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
3	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
4	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
5	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
6	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
7	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
8	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
9	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
10	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>


Step6: Edit and enable desired billing plans.


System


Users


Network


Utilities


Status

Authentication

Black List

Policy

Additional Control

On-demand Account Creation

Plan	Account Type	Quota	Price	Status	Function
1	Usage-time	10 min(s) connection time quota with expiration	12	Enabled	<input type="button" value="Create"/>
2	Usage-time	1 hr(s) connection time quota with expiration	34	Enabled	<input type="button" value="Create"/>
3	N/A	N/A	N/A	Disabled	<input type="button" value="Create"/>
4	N/A	N/A	N/A	Disabled	<input type="button" value="Create"/>
5	N/A	N/A	N/A	Disabled	<input type="button" value="Create"/>
6	N/A	N/A	N/A	Disabled	<input type="button" value="Create"/>
7	N/A	N/A	N/A	Disabled	<input type="button" value="Create"/>
8	N/A	N/A	N/A	Disabled	<input type="button" value="Create"/>
9	N/A	N/A	N/A	Disabled	<input type="button" value="Create"/>
0	N/A	N/A	N/A	Disabled	<input type="button" value="Create"/>

4.2.3 Firmware Upgrade

Software tools tftpd32 is required in the upgrade procedure, please download and install tftpd32 before you proceed further.

* **Note:** Tftpd32 can be downloaded from the following link:
<http://tftpd32.jounin.net/tftpd32.html>


Step1: Place the new firmware of DS-100 on a local location (for example desktop) in the PC that is accessing DS-100’s web interface and performing the upgrade.

Step2: Configure the TCP/IP settings of your PC with an IP address under the same subnet mask as DS-100. For example 192.168.1.20


Step3: Launch tftpd32 and click the DHCP tab.

1. In “Current Directory” field, browse for the location path where the firmware is stored.
2. Enter the IP address of your PC in “Server interfaces” field.
3. In “IP pool starting address” field, enter the start IP address of an IP segment that is available for allocation.
4. Set the size of the IP pool.
5. Enter the firmware filename in “Boot file field”.
6. Enter 255.255.0.0 in the “Mask” field.
7. Click Save button.

***Note:** Please make sure that the location path and the firmware for upgrade is correct.

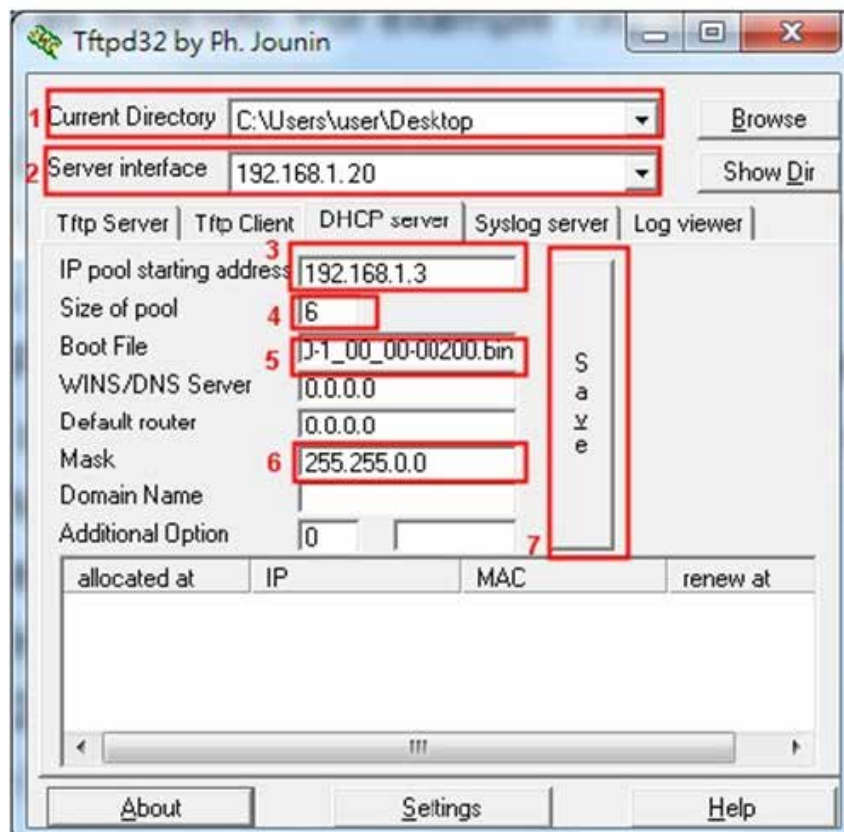

Step4: Click Apply of Firmware Upgrade in DS-100's web interface. DS-100 will automatically restart and connect to tftpd32 server set in Step3 as a DHCP client, download the firmware and perform the upgrade. Progress can be observed on tftpd32.

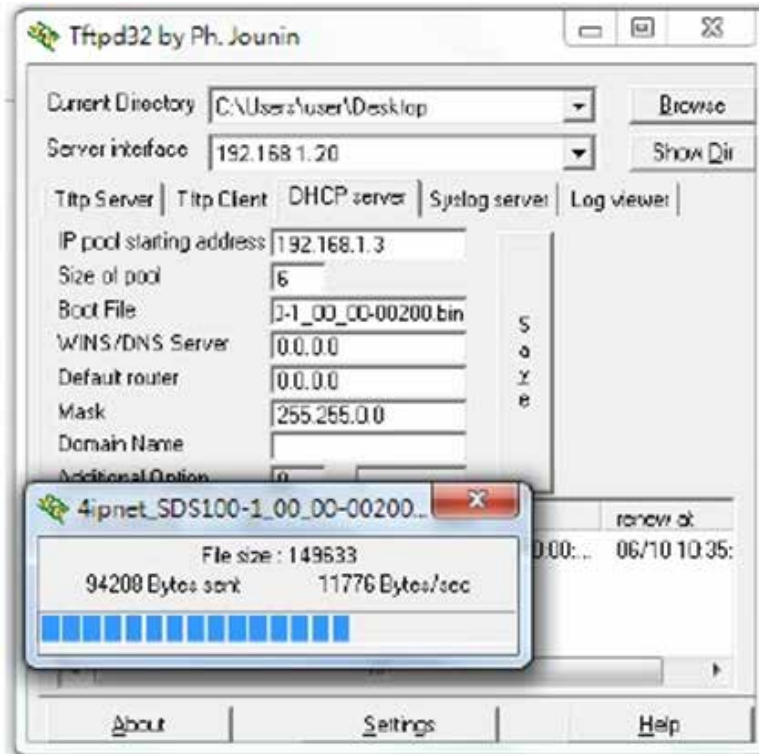

Step5: When completed, check the information displayed at Software Version, DS-100 has successfully upgraded to the new firmware.

Serial Settings	
Data Baud Rate	9600
Data Bits	8
Data Parity	None
Stop Bits	1
Flow Control	None
Network Settings	
Static IP Address	192.168.1.10
Static Subnet Mask	255.255.255.0
Static Default Gateway	192.168.1.254
Static DNS Server	168.95.1.1
Transmit Timer	10
Server Listening Port	5000
Lock Password	0
<input type="checkbox"/> Safe Mode	
<input type="button" value="Apply"/> <input type="button" value="Clear"/>	
Utilities	
Firmware Upgrade	<input type="button" value="Apply"/>
Restart	<input type="button" value="Apply"/>
Reset to Factory Default	<input type="button" value="Apply"/>
Status	
Software Version	1.00.00_00800

4.2.4 Operation Instructions

After completing the Hardware Setup and the devices are physically connected, the system is ready for operation. This section will describe how to operate DS-100 to print out tickets for enabled billing plans.

1. Select an enabled billing plan number on DS-100 by INC or DEC button. The numeric LED display on the center of the device represents the billing plan number currently selected.
2. Press ENTER button on DS-100 to create and print out an on-demand account of the selected billing plan. POS PRINTER will print out the ticket with the text format (Without background image) configured on your Gateway/Controller in Ticket Customization.

* **Note:** If you are unable to get a ticket printout after pressing ENTER, please check if the selected plan is enabled.

5

Troubleshooting

This section is intended to help you solve the most common problems on the DS-100.

5.1 Diagnosing LED Indicators

The DS-100 can be easily monitored through panel indicators to assist in identifying problems, which describes common problems you may encounter and where you can find possible solutions. Please refer to Chapter 2.7 for detailed information.

If the power indicator does not turn on when the power cord is plugged in, you may have a problem with power outlet, or power cord. However, if the Switch powers off after running for a while check for loose power connections, power losses or surges at power outlet. If you still cannot resolve the problem, contact your local dealer for assistance.

5.1.1 Cabling

RJ-45 ports use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable for RJ-45 connections: 100Ω Category 3, 4 or 5 cable for 10Mbps connections or 100Ω Category 5 cable for 100Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet). Gigabit port should use Cat-5 or cat-5e cable for 1000Mbps connections. The length does not exceed 100 meters.

RS-232 Serial port: a common type of electrical connector used particularly in computers. They are among the largest common connectors used with computers. The one side of cable connecting to DS-100 should be DB-9 Female plug, the other side depends on POS printer's specification.

6

Specifications

This section provides the specifications of DS-100, and the following table lists these specifications.

Standard	IEEE802.3 10BASE-T IEEE802.3u 100BASE-TX
Interface	1 x 10/100/ RJ-45 port 2 x RS-232 DB-9 port
Data Bits	5, 6, 7, 8
Stop Bits	1, 1.5, 2
Parity	None, Even, Odd, Space, Mark
Flow Control	RTS/CTS and DTR/DSR (RS-232 only), XON/XOFF
Baud rate	50 bps to 921.6 Kbps
Network Protocols	ICMP, IP, TCP, UDP, DHCP, BOOTP, Telnet, SNMP, HTTP
Management Interface	Web management via web browser
Temperature	Operating: 0 to 40°C Storage: -10 to 70°C
Humidity	Operating: 10% ~ 90% Storage: 5% ~ 90%
Power Adapter	Input: 100~240VAC 50/60Hz (maximum) Output: 12V / 1A
Produce Weight (g)	280 g
Dimensions	Without ears: 90.00 x 109.39 x 31.27 mm With ears: 116.00 x 109.39 x 31.27 mm
Standard	IEEE802.3 10BASE-T IEEE802.3u 100BASE-TX
Interface	1 x 10/100/ RJ-45 port 2 x RS-232 DB-9 port
Data Bits	5, 6, 7, 8
Stop Bits	1, 1.5, 2
Parity	None, Even, Odd, Space, Mark
Flow Control	RTS/CTS and DTR/DSR (RS-232 only), XON/XOFF
Baud rate	50 bps to 921.6 Kbps
Network Protocols	ICMP, IP, TCP, UDP, DHCP, BOOTP, Telnet, SNMP, HTTP
Management Interface	Web management via web browser
Temperature	Operating: 0 to 40°C Storage: -10 to 70°C

7

Network Glossary

The network glossary contains explanation or information about common terms used in wireless networking products. Some of information in this glossary might be outdated, please use with caution.

100Base-TX

Also known as 802.3u. The IEEE standard defines how to transmit Fast Ethernet 100Mbps using Cat.5 UTP/STP cable. The 100Base-TX standard is backward compatible with the 10Mbps 10-BaseT standard.

DHCP

Dynamic Hosting Configuration Protocol. A protocol that enables a server to dynamically assign IP addresses. When DHCP is used, whenever a computer logs onto the network, it automatically gets an IP address assigned by DHCP server. A DHCP server can either be a designed PC on the network or another network device, such as a router.

Firmware

The program that runs inside embedded device such as AP or Switch. Many network devices are firmware upgradeable through web interface or utility program.

FTP

File Transfer Protocol. A standard protocol for sending files between computer over a TCP/IP network and the internet.

IP Address

IP (Internet Protocol) is a Layer 3 network protocol that is the basis of all Internet communication. An IP address is 32-bit number that identifies each sender or receiver of information that is sent across the Internet. An IP address has two parts: an identifier of a particular network on the Internet and an identifier of the particular device (which can be a server or a workstation) within that network. The new IPv6 specification supports 128-bit IP address format.

Packet

A unit of data sent over a network.

Subnet Mask

An address code mask that determines the size of the network. An IP subnet are determined by performing a BIT-wise AND operation between the IP address and the subnet mask. By changing the subnet mask, you can change the scope and size of a network.

TFTP

Trivial File transfer Protocol. A file transfer protocol, with the functionality of a very basic form of FTP. It is used to transfer small amounts of data between hosts on a network, such as Switch firmware.