






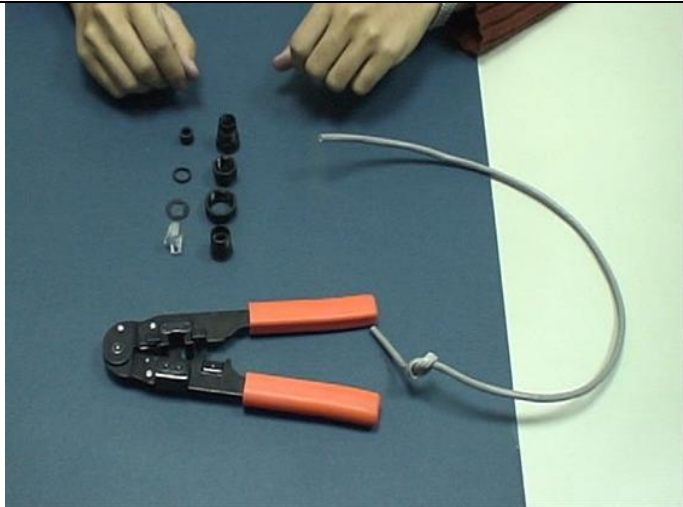
Waterproof tape installation for outdoor device

Part 1: Antenna Cable & AP

	
1. Connect antenna cable with AP.	2. Use a part of waterproof asphalt tape
	
3. Tear off membrane of tape.	4. Please lengthen the tape before wrapping it around the joint between antenna and N-type connector.
	
5. For best waterproof effect, please make sure the tape is overlapped.	

Waterproof tape installation for outdoor device

Part 2: Ethernet Cable & AP



6. Assemble the component of Ethernet cable (only for WH-5000A)




7. Detailed assembling process, please refer to online FAQ.

www.airlive.com/support/WH-5000A/faq_wh_5000a.shtml



8. Connect Ethernet cable with AP.

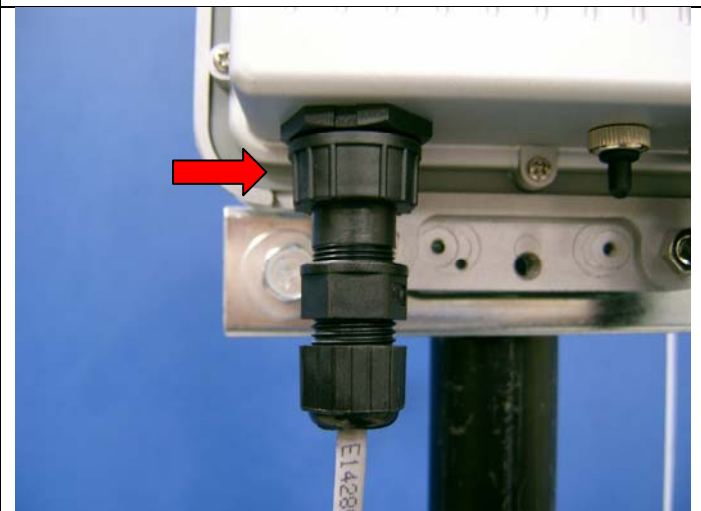

9. Turn the screw to tighten it with AP.



10. We suggest that you also use waterproof tape on the joint between Ethernet cable and AP.



11. All waterproof installations are completed.