

1. Get the IP cam body and accessory from the package.



4. Pull out the metal plate inside the ACC-100.



2. Drill the screws and stand onto the IP cam.



3. Remove the screws of the ACC-100 back casing.




5. Get the 1/4" screws from ACC-100 accessory bag. Positioning the IP cam and 1/4" screw as the photo.



6. Slightly screw up the IP cam onto the metal plate.



9. Remove the weather-proof plastic ring

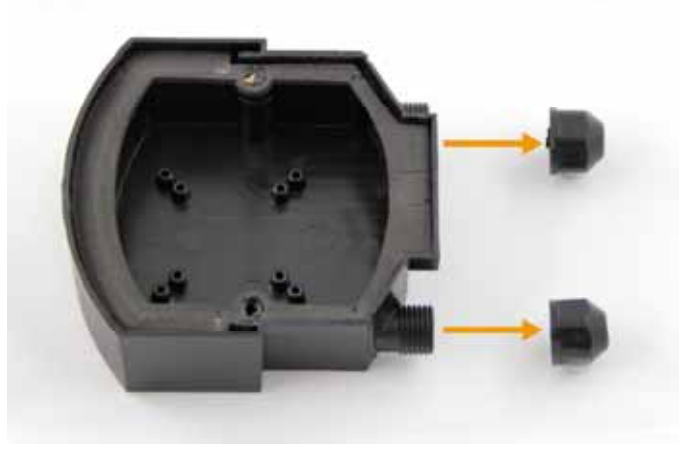

7. Move the IP cam and screw to the front-end of the metal plated and screw up tied.



10. Follow the arrow, have the LAN cable and DC power cable go through the hole, and plug into the IP cam body.



8. Prepare your LAN cable (not included in package) and PoE-100HD Power adaptor.



11. Re-assembly the weather-proof ring to the Acc-100



12. Have the metal plate sliding into the ACC-100



15. Assembly complete.




13. Pull the cables to the proper position.



16. Take the wall mount and use the screws to fix the wall mount onto the ACC-100.



14. Assembly the back casing to the ACC-100.

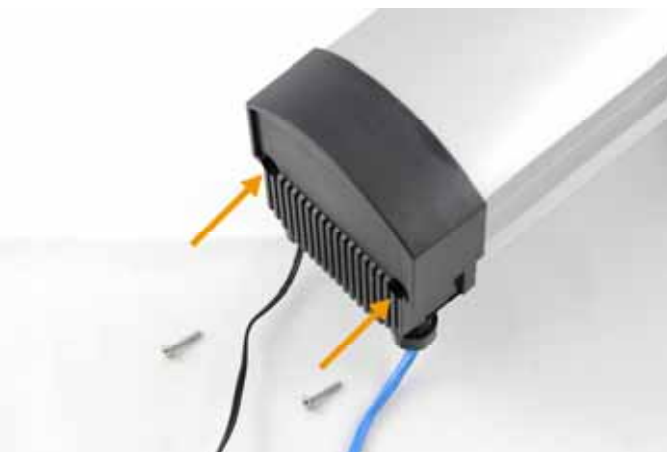

17. Fixture complete.

