

◆ **AirLive ACC-DOMCAM Assembling with AirLive OD-2050HD & OD-2060HD**

1. Unloose the thread-lock sealing nut on the cable glands.



2. Unloose the cable glands body with wrench.



3. Remove four bolts on the case with hexagon wrench, which is in camera accessory pack.



4. Disconnect wires from the PCB inside.



5. Pull out the cable.



6. Remove the cable gland out of wires.



◆ AirLive ACC-DOMCAM Assembling with AirLive OD-2050HD & OD-2060HD

7. Put the plug, which is in camera accessory pack, to seal the cable hole.



8. Remove the white rubber at the bottom of the camera.



9. Let the cable wire segment go through the bottom hole from outside. Connect the wires, color to color, pin number to pin number to the PCB inside of the camera.



10. Place OD-2060HD/OD-2050HD on the ACC-DOMCAM mounting plate and fasten with 3 screws.



11. Place the top cover back to original position and fasten with 4 bolts.



6. The camera is ready for mounting on the wall.



◆ AirLive ACC-DOMCAM Assembling with AirLive FE-200VD

1. Remove four screws and mounting plate out from AirLive ACC-DOMCAM.




2. Remove four bolts to take FE-200VD top cover out with hexagon wrench which is in camera accessory pack.



3. Fix FE-200VD on AirLive ACC-DOMCAM with four screws.



4. Make sure to put the top cover back to the right position.

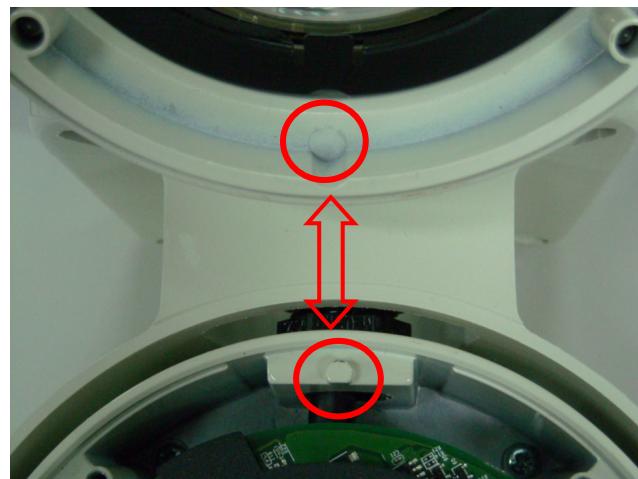

5. Put the top cover back and fasten 4 bolts back.



6. The camera is ready for mounting on the wall.

