



## Using AirLive IPCAM with Facebook Album

1. Link to the URL <http://www.facebook.com/mobile>, and login with your facebook account

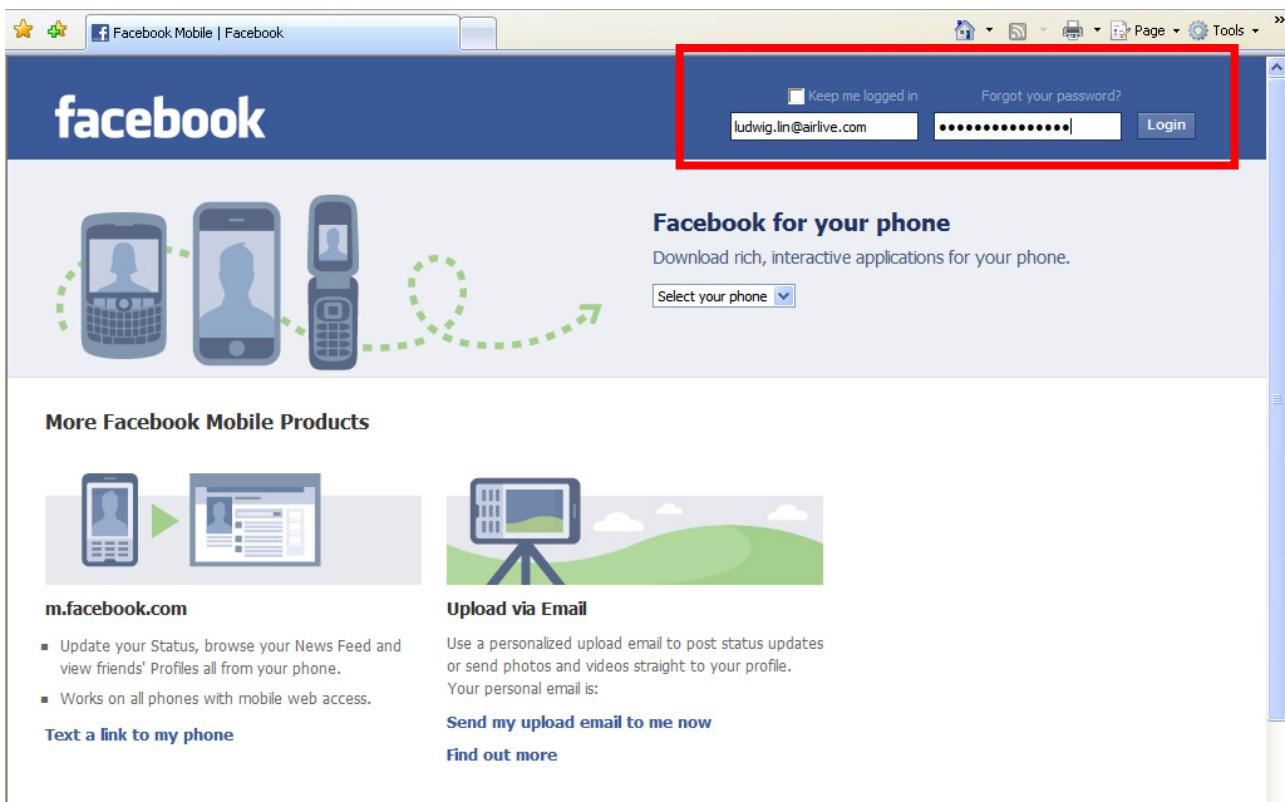

The screenshot shows the Facebook mobile website (<http://www.facebook.com/mobile>). A red box highlights the top right corner where the login credentials are entered. The login form includes fields for email (ludwig.lin@airlive.com), password (represented by a series of dots), and a 'Login' button.


2. Require your uploading mail address by clicking the “Send my upload email to me now”.

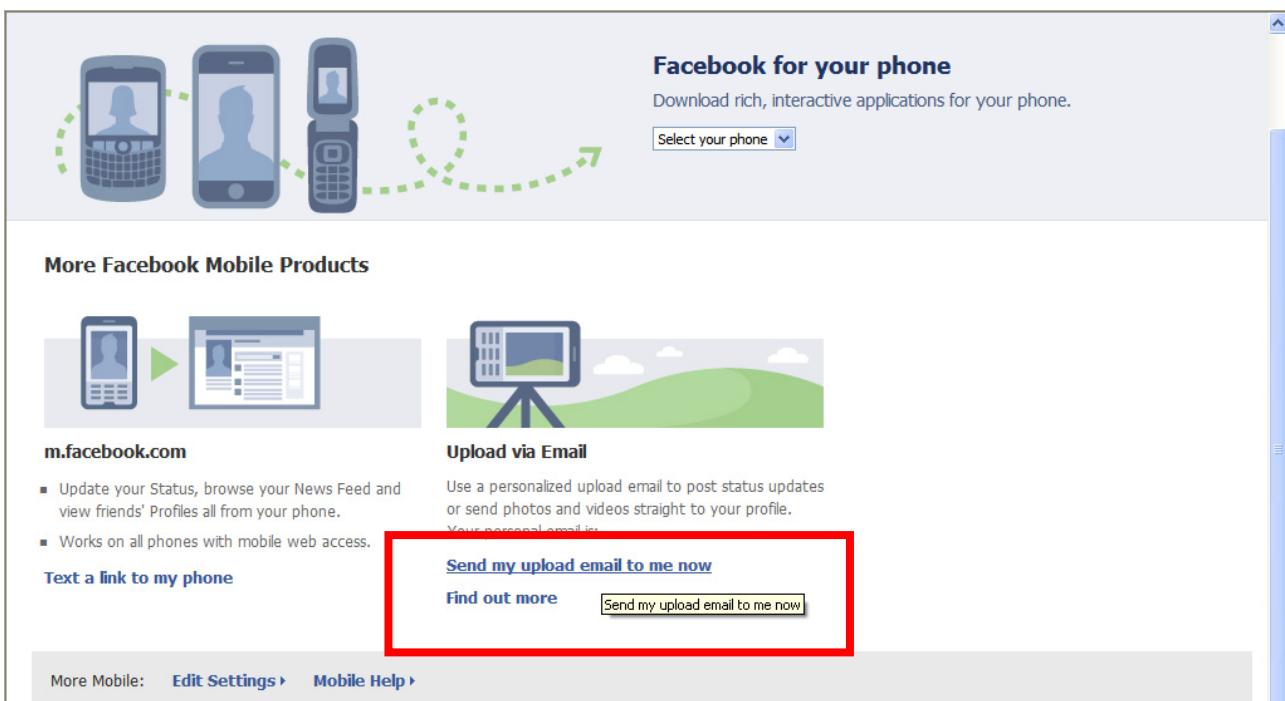


The screenshot shows the same Facebook mobile website. A red box highlights the 'Upload via Email' section. It includes a link to 'Send my upload email to me now'. Below this link is another link labeled 'Find out more'.



3. Write down the specific mail address on the “Upload Photos via Email” popup window.

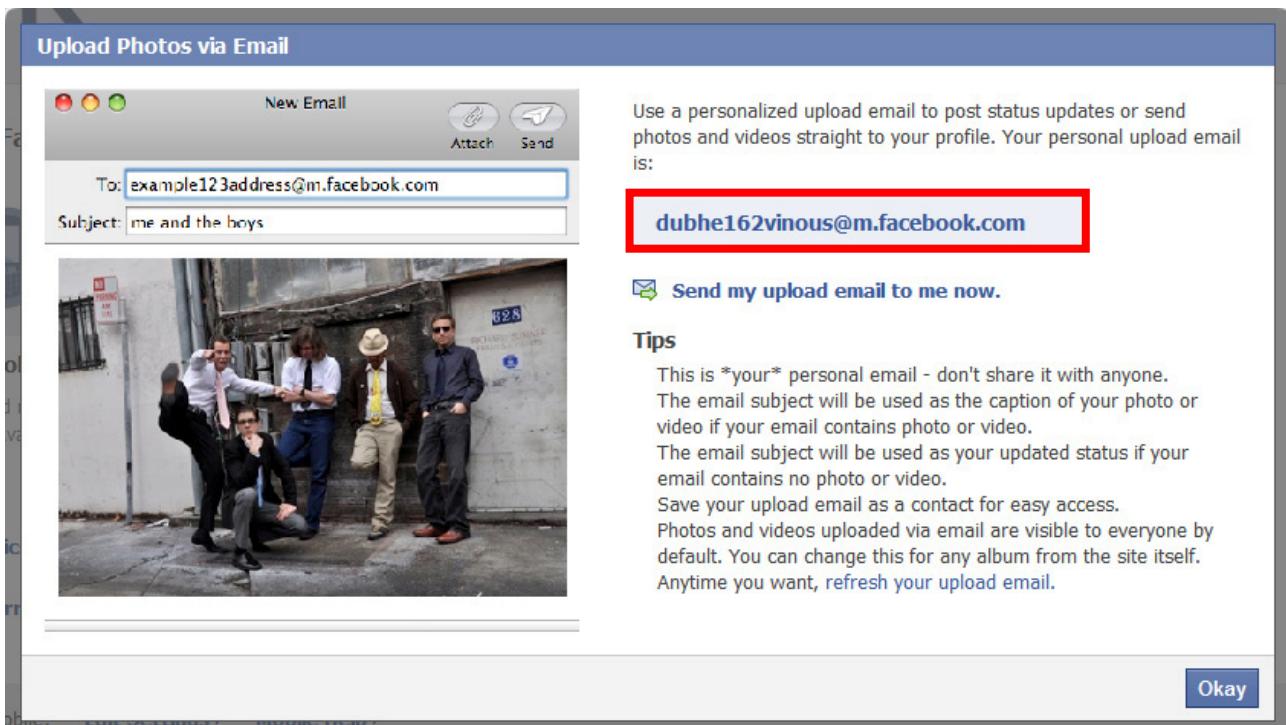

4. Open the e-mail setting page of AirLive IPCAM (SMTP→General) and fill out the information for sending alert e-mail. The recipient's e-mail address should be the one you got in step 4.

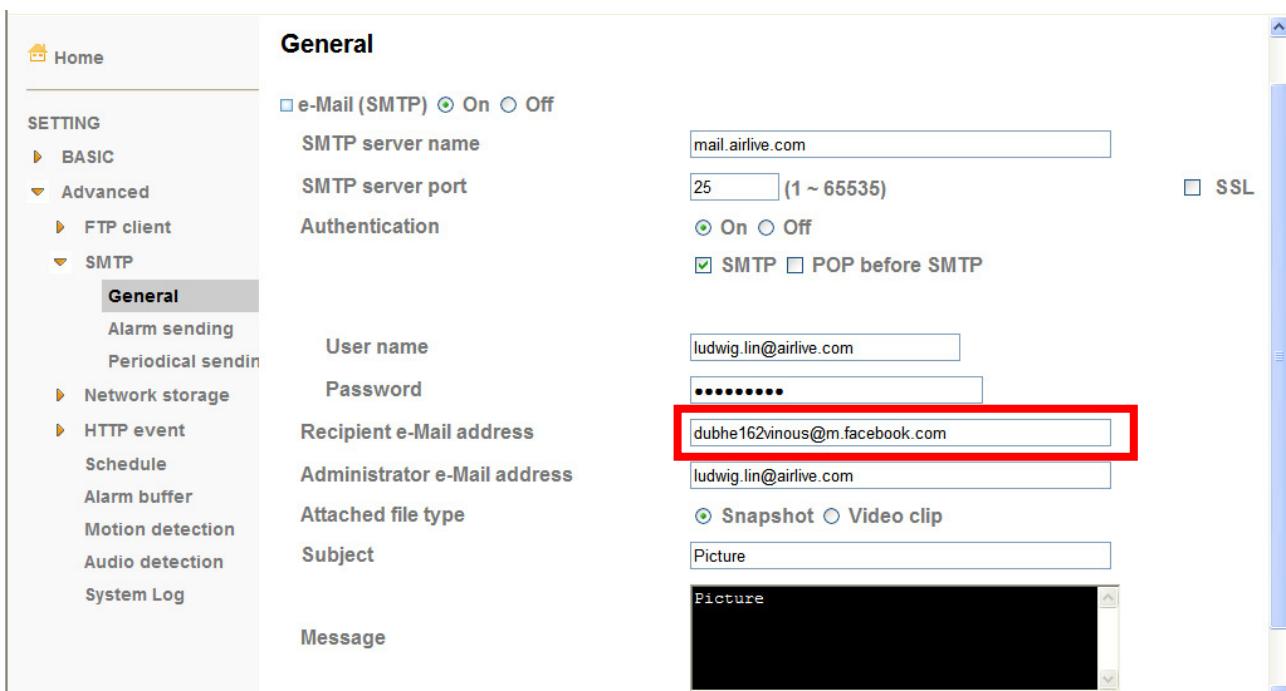




5. Open the Alarm Sending page (SMTP→Alarm Sending) for further configuration.

The screenshot shows the 'Alarm sending' configuration page. On the left, there's a sidebar with 'Home' and a 'SETTING' menu containing 'BASIC', 'Advanced', 'FTP client', 'SMTP' (which is expanded), and 'General'. Under 'SMTP', 'Alarm sending' is selected and highlighted with a grey background. The main area has a red border around the 'Motion detection' section. Inside, there are checkboxes for 'Alarm sending' (set to 'On'), 'File attachment' (set to 'On'), 'Image file name' (set to 'Cameras'), and 'Suffix' (set to 'Date Time'). Below this, under 'Alarm', there are three checkboxes: 'Motion detection' (checked), 'Audio detection' (unchecked), and 'Network link down' (unchecked). Under 'Effective Period', 'Always' is selected. At the bottom are 'OK' and 'Cancel' buttons.

6. Click on the Motion Detection button for setting the Motion Detection area and its relative parameter.

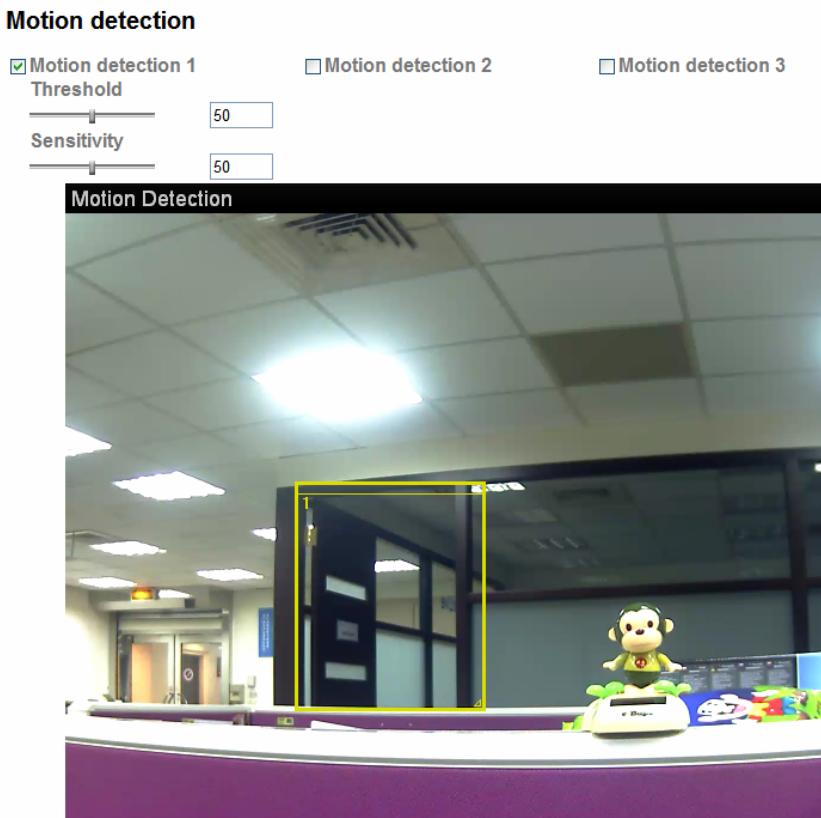



7. After the configuration steps above, whenever the Motion Detection event happens, AirLive IPCAM will upload the alert image to your Facebook album.

facebook Home Profile Friends Inbox Ludwig Lin Settings Logout Search

Ludwig Lin

Wall Info Photos +

What's on your mind?

Attach: Share

Ludwig Lin Options Remove

9 new photos 19 seconds ago via Facebook Mobile Share

Ludwig Lin Like

Island Vacation Play Tiki Farm and go

Upload a Photo Take a Photo

Edit My Profile Write something about yourself.

Information Birthday: May 4, 1976

Friends 0 friends Find people you know

Your Profile > Wall Help

Your Wall is a place where you and your friends can post content, such as photos and messages. Use the Publisher to post for others to see.

Your Wall is visible to anyone who visits your profile. Learn more

A red box highlights the "Photos" section showing three recent uploads from the AirLive IPCAM.

facebook Home Profile Friends Inbox Ludwig Lin Settings Logout Search

My Photos - Mobile Uploads

Photo 1 of 1 | Back to Album | My Photos

Picture From your album:



## Using AirLive IPCAM with Picasa Album

1. Login to the Picasa and click on the “Settings” on the right-up of the page.

The screenshot shows the Picasa Web Albums interface. At the top, there's a navigation bar with links like Gmail, Calendar, Documents, Reader, Web, more, and a user account section for ludwiglintw@gmail.com. A red box highlights the "Settings" link in the top right corner. Below the navigation bar, it says "Albums (24) View My Public Gallery". There are four rows of thumbnail images representing albums, each with a title, date, and photo count. To the right of the albums, there's a sidebar with a profile picture for "Photos by Ludwig", a "New! in Picasa Web Albums" section about wireless uploads, and an "Embed Slideshow" link.

2. Check the option “Allow me to upload photos by email”, and then enter the secret word for getting the upload email address.

The screenshot shows the Picasa Settings page. The "Email notification" tab is selected. Under the "Upload photos by email:" section, there is a checked checkbox labeled "Allow me to upload photos by email." and an input field where the word "airlive" has been typed. A red box highlights this entire section. Below this, there is a note: "Note: Must be 6-15 letters/digits long." Further down, it says "Email photos to this address: ludwiglintw.airlive@picasaweb.com" and "This email address is unique to you." At the bottom, there are "Save changes" and "Cancel" buttons.



### 3. Write down the specific email address.


The screenshot shows the 'Settings' page of Picasa Web Albums. The 'Email notification' tab is selected. In the 'Upload photos by email' section, there is a checked checkbox for 'Allow me to upload photos by email.' Below it, a text input field contains 'airlive'. Underneath, a note says 'Note: Must be 6-15 letters/digits long.' A red box highlights the text 'Email photos to this address: ludwiglintw.airlive@picasaweb.com'. Below this, a smaller note says 'This email address is unique to you.'

### 4. Open the e-mail setting page of AirLive IPCAM (E-Mail→Setting) and fill out the information for sending alert e-mail. The recipient's e-mail address should be the one you got in step 3.

The screenshot shows the 'Setting' page of AirLive IPCAM under the 'E-Mail' tab. The 'E-mail To' field contains the email address 'ludwiglintw.airlive@picasaweb.com'. This field is highlighted with a red box. Other fields visible include 'SMTP Server' (mail.airlive.com), 'SMTP Port' (25), 'SSL' (Disable selected), 'SMTP Authentication' (Enable selected), 'Authentication User Name' (ludwig.lin), 'Authentication Password' (redacted), 'E-mail From' (ludwig.lin@airlive.com), and 'E-mail Subject' (FOE-100HD).



5. Open the Motion Detection configuration page and set the motion detection area.

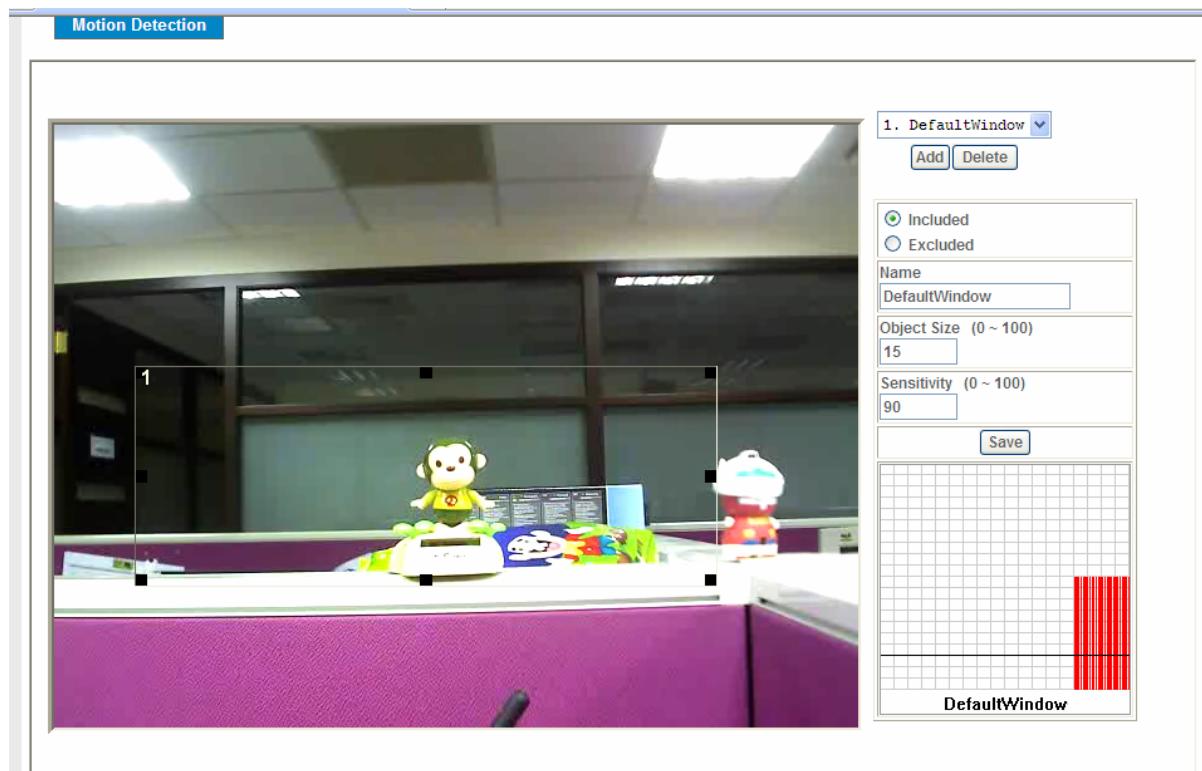

6. Open the Event Schedule → Setting page for configuring the event.

Name	Enable	Type	Weekday	Start	Duration	Trigger by	Action
MD-Mail	yes	Event	1111111	0:0	24:0	x, MO	SMTP

Setting Record

Name: MD-Mail

Enable: Yes

Type: Event Trigger

Weekday: 1111111

Start: 0:0

Duration: 24:0


Trigger by: x, MO

Action: SMTP

To email address: dubhe162vinous@m.facebook.com



7. Open the Event Schedule→Record page for set the attached file of the alert email.

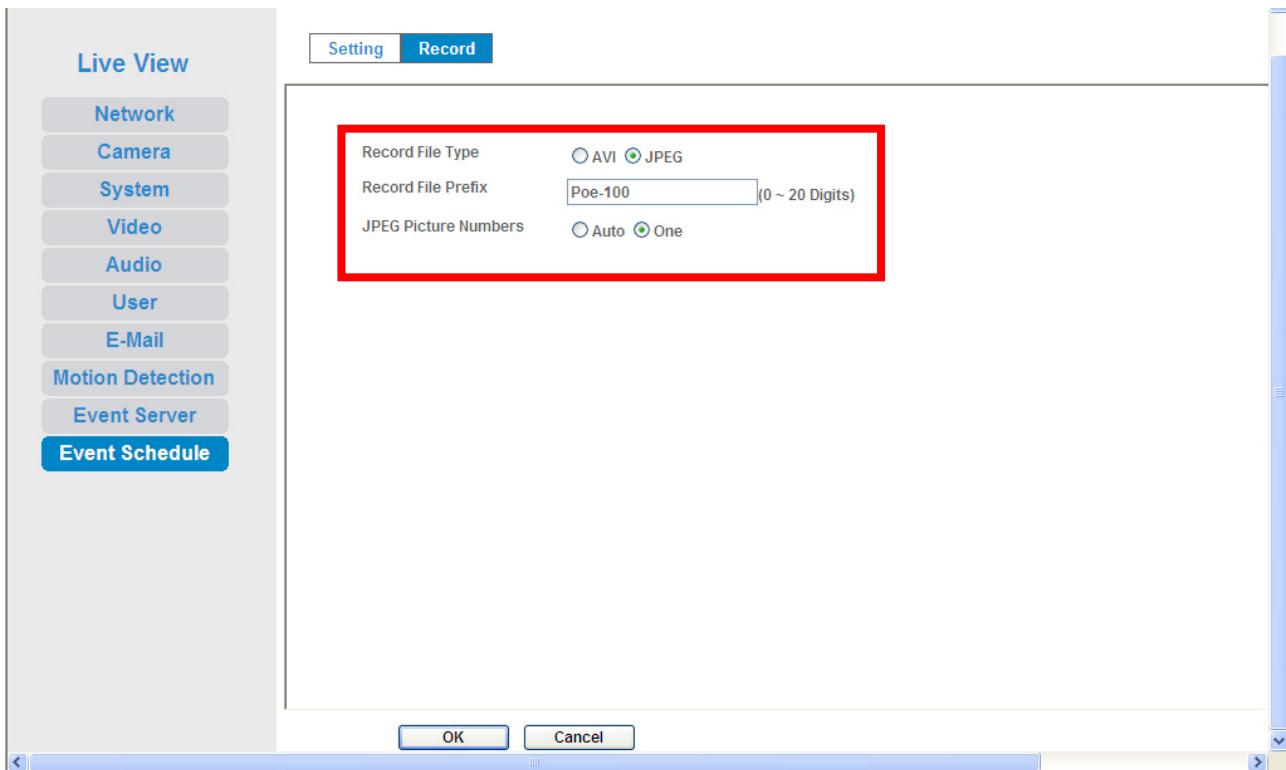

8. After the configuration steps above, whenever the Motion Detect event happens, AirLive IPCAM will upload the alert image to your Picasa album.

